

HX ONE CHEAT SHEET

LINE 6

KNOBS 1 - 3

- Turn to adjust parameters for the current effect
- Press to reset value
Press to toggle between Hz or ms and note values
- Press and hold to assign that parameter to FLUX/Expression control

< PAGE >

- Press to see more parameters for the selected effect or to navigate the Effect list

HOME / SAVE

- Press from any screen to return to the Home View
- Press and hold to enter the Preset Save View




ON SWITCH


- Press to toggle current effect enabled or bypassed. The ON LED lights when enabled

DISPLAY

Press to display the Home/Edit View
Use KNOBS 1-3 to adjust the parameters

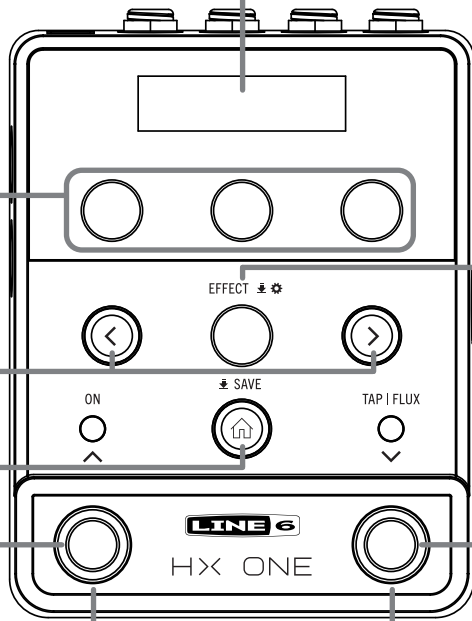

 Press and release both the ON and TAP switches to display the Preset List




Press ON or TAP to select a preset

EFFECT

- Turn to select an effect
- Press and turn to select a different effect category...
- Press to open the Effect list...
- Turn to choose your effect from the category's Effect list
- Optionally, press < PAGE > to choose a different category
- Press and hold to enter the Settings Menu

TAP | FLUX SWITCH

- Tap to set a tempo for time-based effects to follow
- Press & hold to toggle between TAP (red) and FLUX (white). See the Owner's Manual


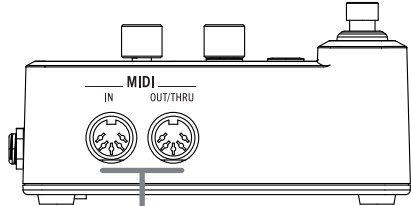


MIDI IN, OUT/THRU

HX One responds to MIDI commands for external parameter control, preset changes, and MIDI Clock

POWER

Connect the included AC adapter here to power on HX[®] One

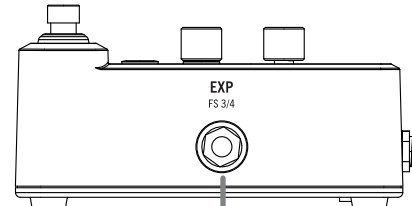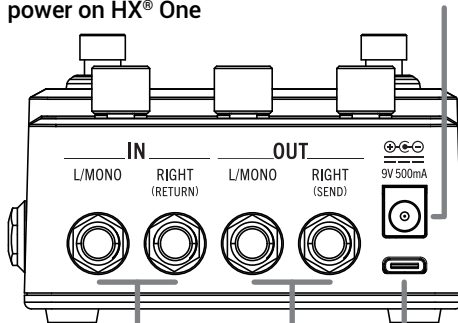

EXP - FS 3/4

Connect an expression pedal or dual footswitch for additional control

IN

Connect your instrument here. Use both jacks for stereo or the L/MONO for mono input


OUT

Connect to the input of your amplifier or other pedals. Use both jacks for stereo or the L/MONO for mono output

USB

Connect to your computer for device firmware updates

Front of Amp Setup

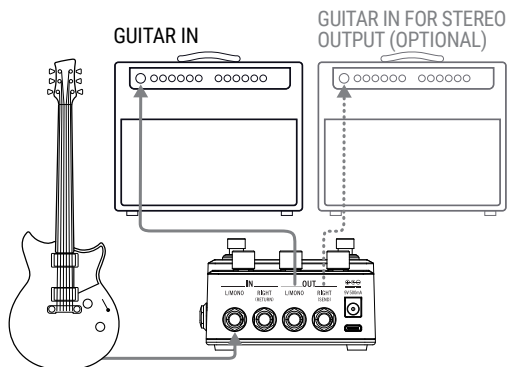

4-Cable Method Setup

